




COOKTOP PARTS

FOR MODELS: RF111PXSQ0, RF111PXSQ0
(Designer White) (White/Black)

30" ELECTRIC FREESTANDING
STANDARD CLEAN RANGE

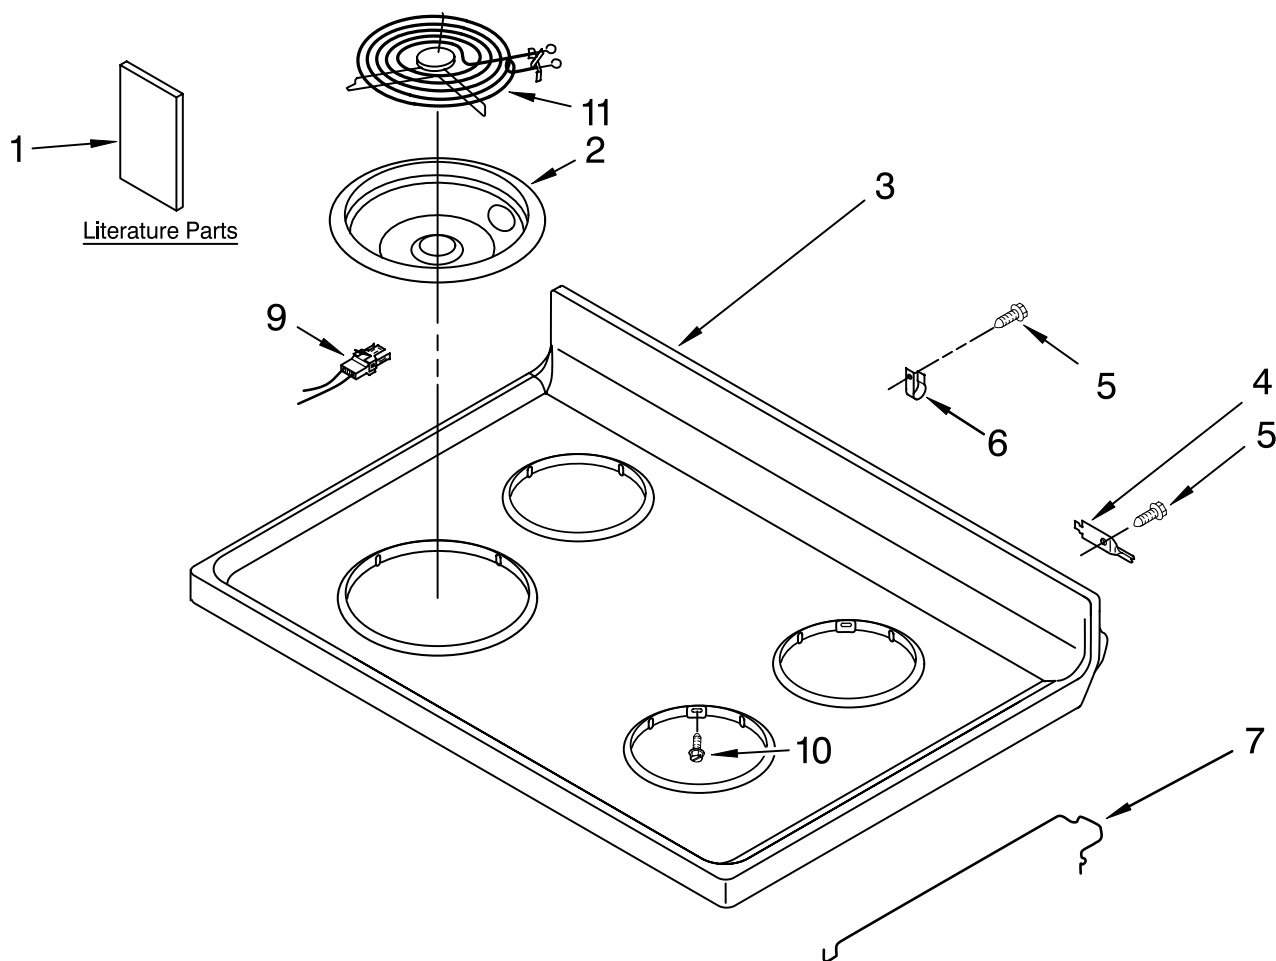

Illus. No.	Part No.	DESCRIPTION
1	9762996	Literature Parts
	9757142	Instructions, English/Spanish
	9757143	Installation, English/French
	9763000	Anti-Tip Template
	9762974	Owners Manual
	9762761	Sheet, Tech
		Safer Cooking Tips


Illus. No.	Part No.	DESCRIPTION
2	3195208	Bowl, Drip
	3195209	6" Chrome (3)
		8" Chrome (1)
3	3186235	Cooktop
		White
4	3195060	Hinge, Cooktop (2)
5	3196178	Screw

Illus. No.	Part No.	DESCRIPTION
6	308605	Strain Relief
7	3195812	Rod, Support (2)
9	814399	Receptacle, Elmnt
10	3196154	Screw
11		Element, Surface
		(Includes #8)
	9761348	6" (3)
	9761346	8" (1)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

FOR MODELS: RF111PXSQ0, RF111PXSQ0
(Designer White) (White/Black)

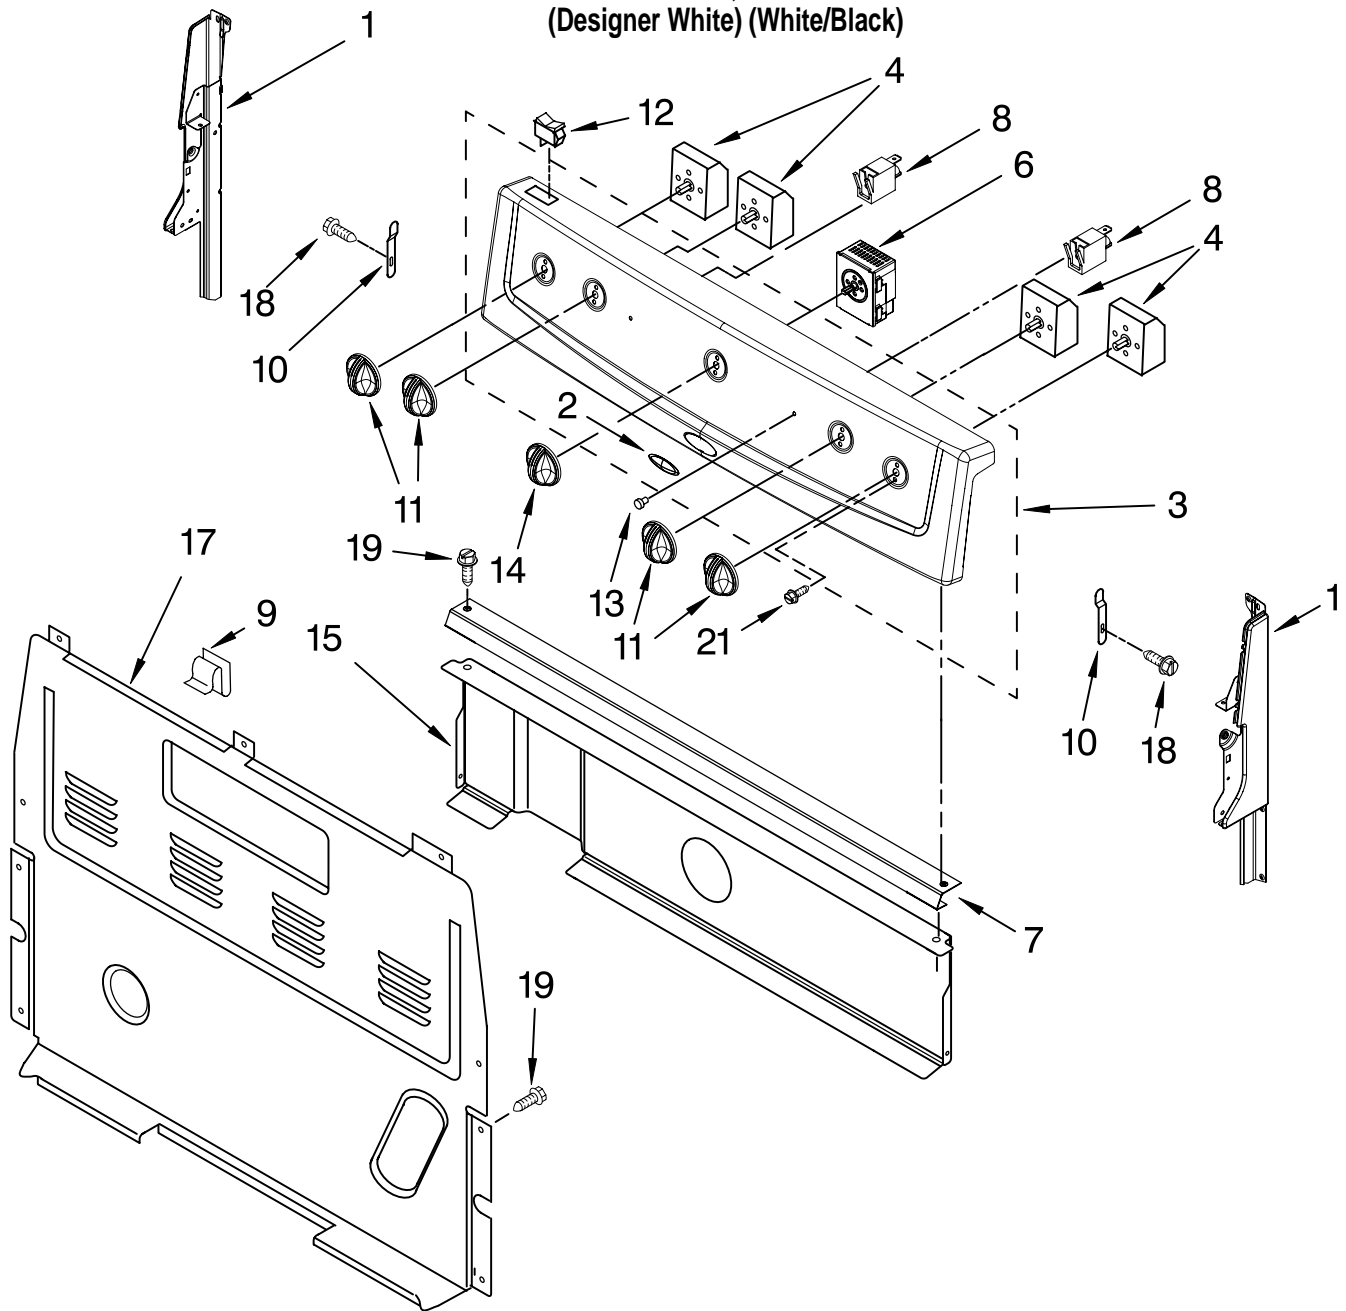

Illus. No.	Part No.	DESCRIPTION
1	W10009040	Endcap Left Hand-White
	W10009080	Left Hand-Black
	W10009050	Right Hand-White
	W10009090	Right Hand-Black
2	9757609	Nameplate
3	9762012	Panel, Backguard White
	9762014	Black
4		Switch, Infinite
	3148953	Use W/ 8" Element
	3148951	Use W/ 6" Element


Illus. No.	Part No.	DESCRIPTION
6	9762215	Switch, Selector
7	9762095	Brkt-Mntg Console
8	8523266	Indicator, Oven
9	8273564	Clip
10	3196200	Clip, Spring (2)
11		Knob, Infinite (4)
	9761962	White
	9761964	Black

Illus. No.	Part No.	DESCRIPTION
12	3149360	Switch, Rocker
13	3196068	Lens, Indicator
14		Knob, Thermostat
	9762526	White
	9762524	Black
15	8053912	Shield, Heat
17	8272473	Cover, Upper Rear
18	3196166	Screw
19	3196178	Screw
21	3400882	Bolt

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

FOR MODELS: RF111PXSQ0, RF111PXSQ0
(Designer White) (White/Black)

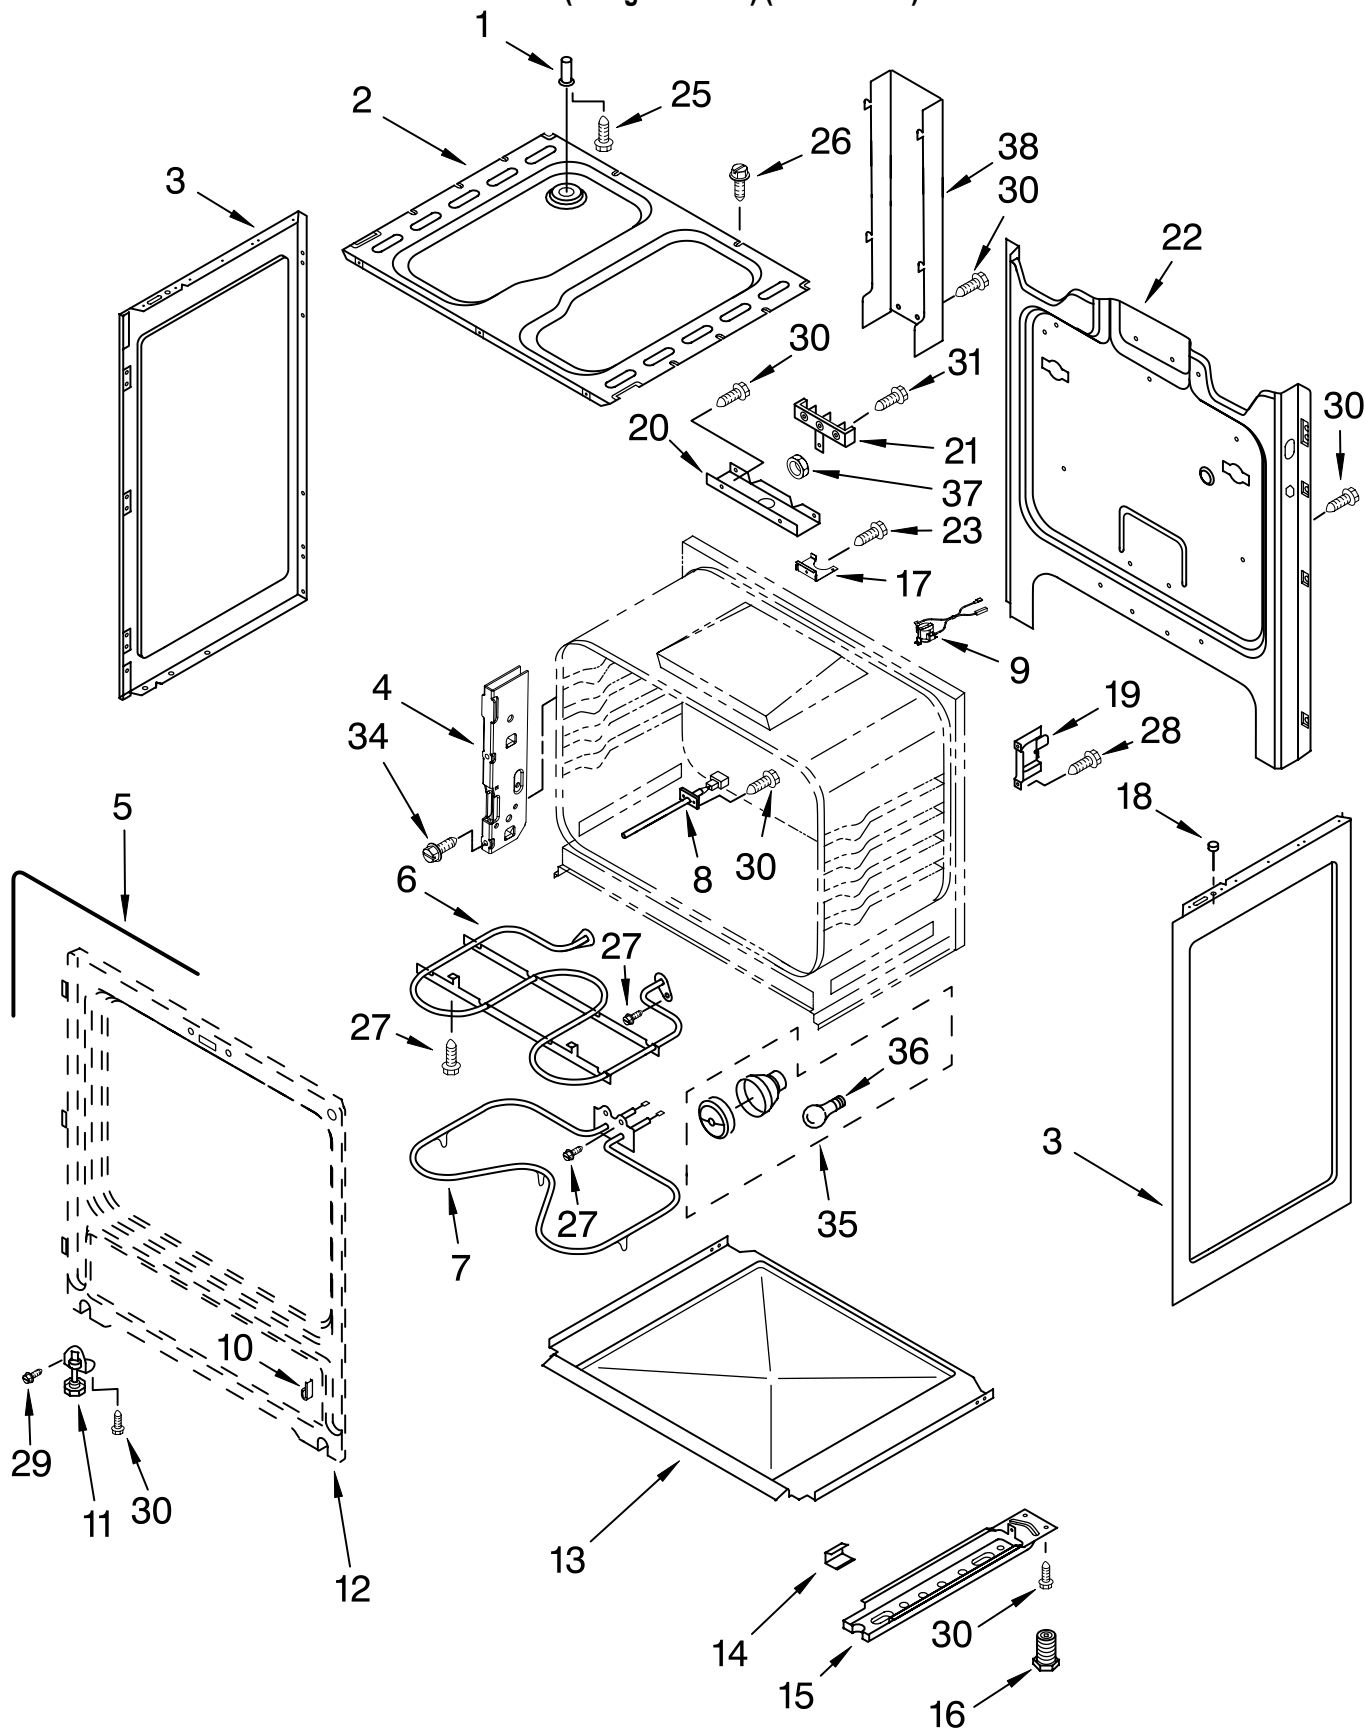

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

FOR MODELS: RF111PXSQ0, RF111PXSW0
(Designer White) (White/Black)


Illus. No.	Part No.	DESCRIPTION
1	3169143	Vent Tube
2	3186144	Box, Burner
3		Panel, Side (2)
	8053830	White-Textured
4	9760407	Brkt-Mounting
5	3186152	Seal, Oven Door
6	9757340	Element, Broil
7	9758541	Element, Bake
8	8273902	Sensor
9	9757158	Thermostat
10	9759785	Glide, Drawer Frnt
11	3196037	Foot, Front (2)
12		Frame, Front (Non-Serviceable)
13	8054068	Tray, Insulation
14	3196576	Clip, Panel (6)
15	9760314	Rail, Base (2)
16	9761935	Foot, Rear (2)
17	9756355	Brkt-Thermostat
18	3195809	Bumper, Side (2)
19	3186116	Support, Oven (2)
20	3186034	Bracket, Service
21	9761958	Block, Terminal
22	8274034	Back, Main
23	3196172	Screw
25	3196567	Screw
26	3196168	Screw
27	3196174	Screw
28	3196169	Screw
29	3196179	Screw
30	3196178	Screw
31	3400016	Screw
34	W10031780	Screw
35	3196701	Light Socket Assy
36	311255	Bulb, Oven Light
37	112432	Nut
38	9758283	Cover, Box

INSULATION

8273263 Insulation, Wrap
8272611 Insulation, Back

DRAWER & BROILER PARTS

FOR MODELS: RF111PXSQ0, RF111PXSQ0
(Designer White) (White/Black)

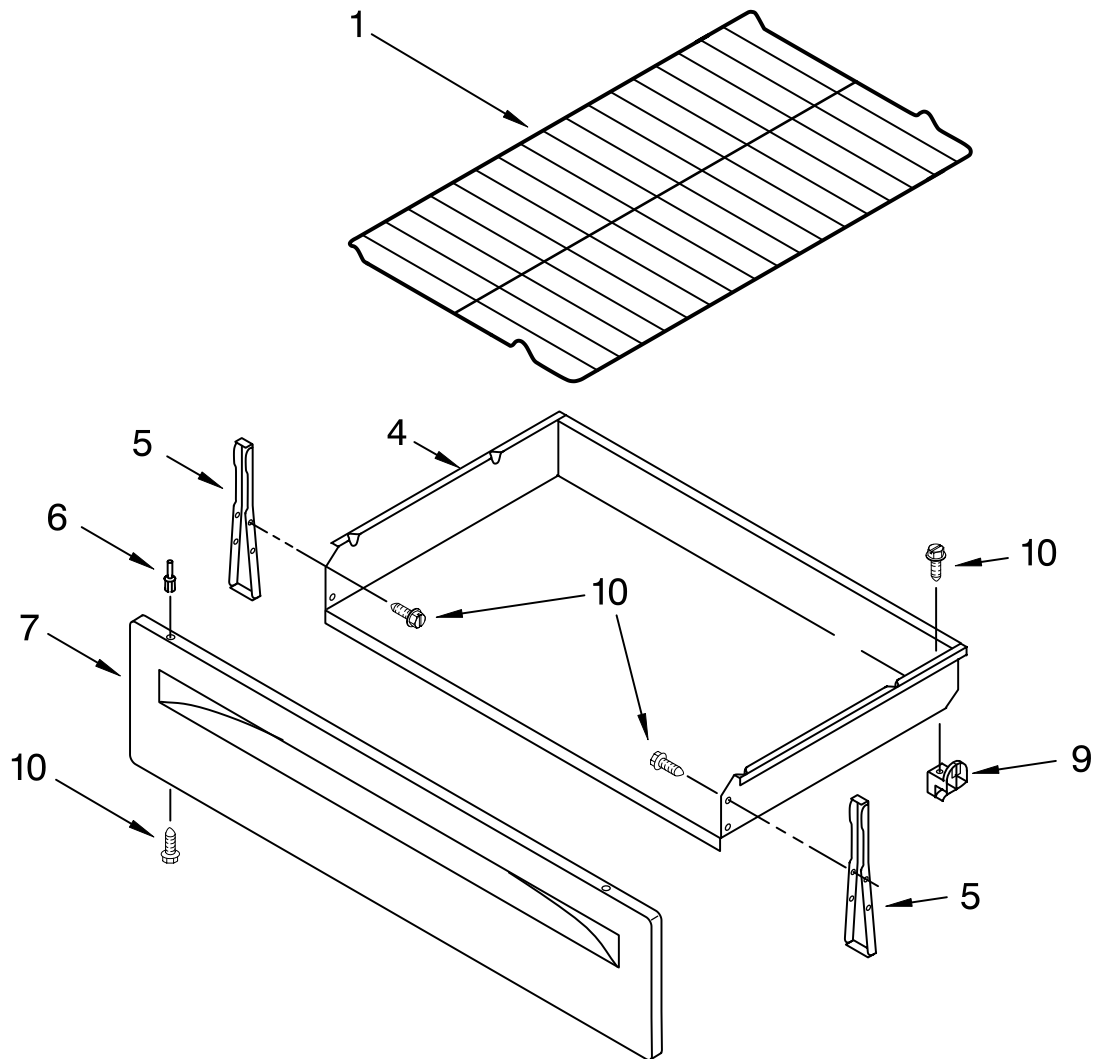


Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
4	9761031	Drawer, Storage
5	9758200	Bracket, Drawer(2)
6		Rivet, Push (2)
7	3196814	White
	8053339	White
9	8053334	Glide, Drawer (2)
10	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

FOR MODELS: RF111PXSQ0, RF111PXSQ0
(Designer White) (White/Black)

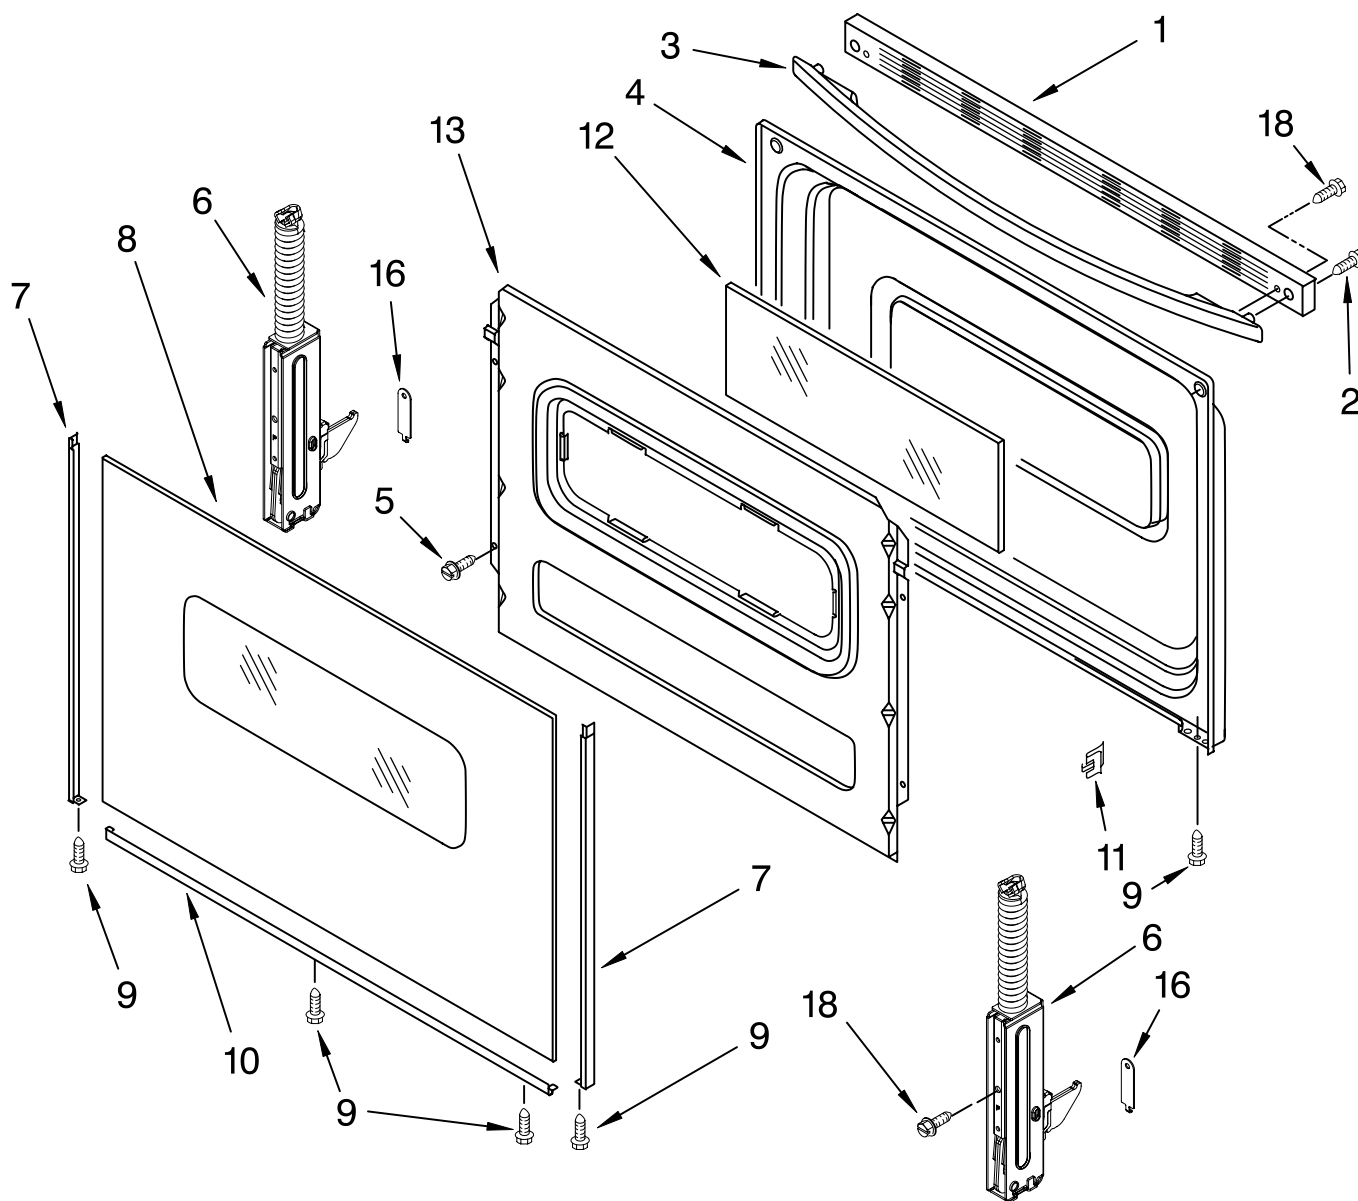

Illus. No.	Part No.	DESCRIPTION
1	9761975	Trim, Top
	9762391	White
	9762391	Black
2	3196164	Screw
3		Handle, Door
	9761982	White
	9761983	Black
4	9761340	Liner, Door
5	W10031790	Screw
6	9761494	Hinge, Door (2)

Illus. No.	Part No.	DESCRIPTION
7		Trim, Door (2)
	8523172	Left Hand-White
	8523171	Left Hand-Black
	8523166	Right Hand-White
	8523165	Right Hand-Black
8		Glass, Door
	9762476	White
	9762477	Black
9	3196160	Screw

Illus. No.	Part No.	DESCRIPTION
10		Trim, Lower
	8523175	White
	8523177	Black
11	3196025	Clip, Glass (4)
12	9758163	Window, Inner
13	9761500	Retainer, Insul.
16	9761517	Clip, Dr Mntg (2)
18	W10031780	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

FOR MODELS: RF111PXSQ0, RF111PXSW0
(Designer White) (White/Black)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Following Parts Not Illustrated

SPLICING WIRES--25FT.

LENGTH

242828	Wire, Black	12 Ga. 150° c
242821	Wire, Blue	14 Ga. 150°c
242822	Wire, Brown	14 Ga. 150°c
242830	Wire, Brown	14 Ga. 200°c
242823	Wire, Green	14 Ga. 150°c
242824	Wire, Orange	14 Ga. 150°c
242825	Wire, Red	14 Ga. 150°c
242831	Wire, Red	14 Ga. 200°c
242827	Wire, Yellow	14 Ga. 150°c

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

72017	White
72107	Almond
4392899	Biscuit
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)
4392900	Biscuit (Uncut)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3184478	Cleaner, Glass

ANTI-TIP KIT

W10017440	Anti-Tip Kit
-----------	--------------

WIRING HARNESS PARTS

9761476	Harness, Cooktop
W10036230	Harness, Oven
3196520	Clip, Wire
313660	Clip, Ground Wire
311227	Wire, Ground
3196154	Screw, Grnd-Cktop
3196174	Screw, Grnd-Back

Miscellaneous

814381	Pin Kit-Dr Removal
--------	--------------------

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST